

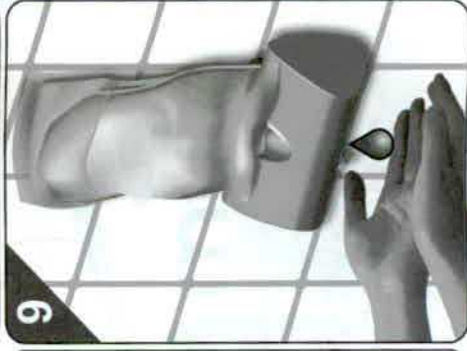
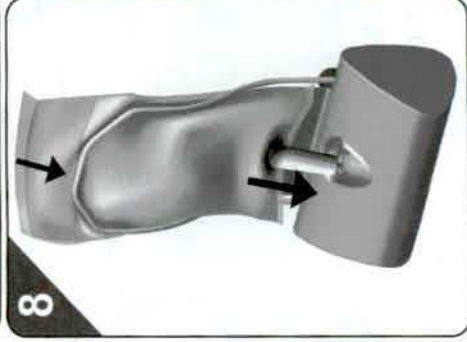
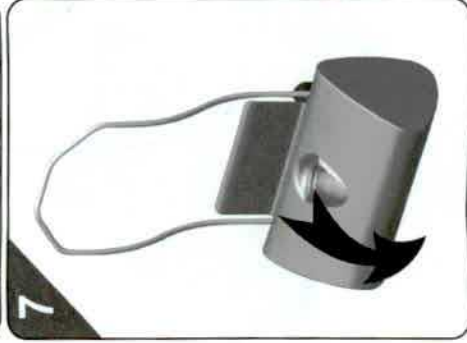
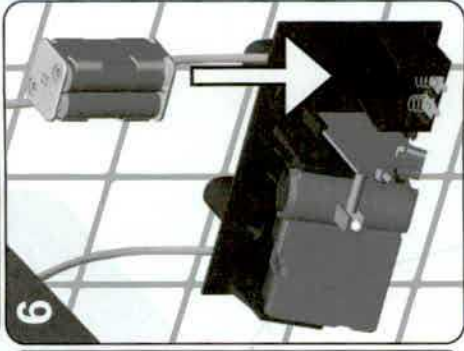
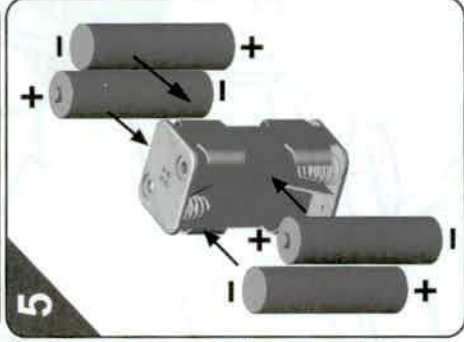
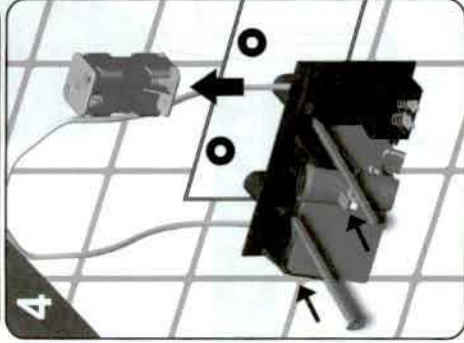
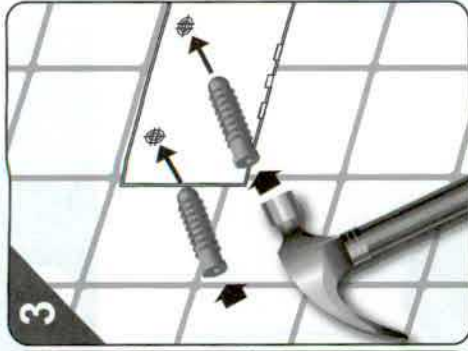
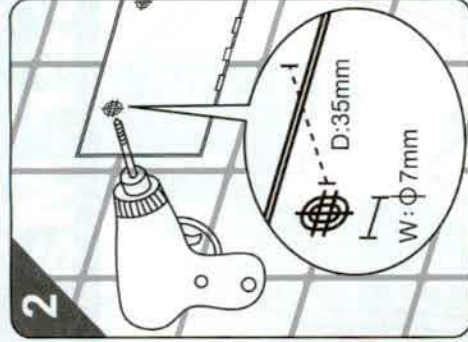


Steps

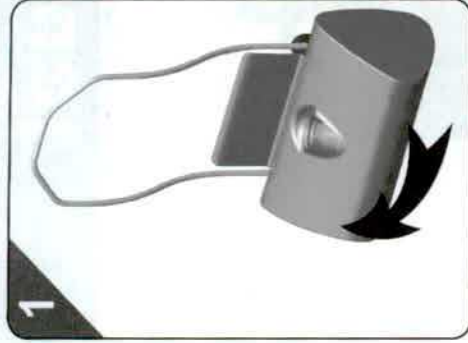

Drop Cycles Setting Procedure

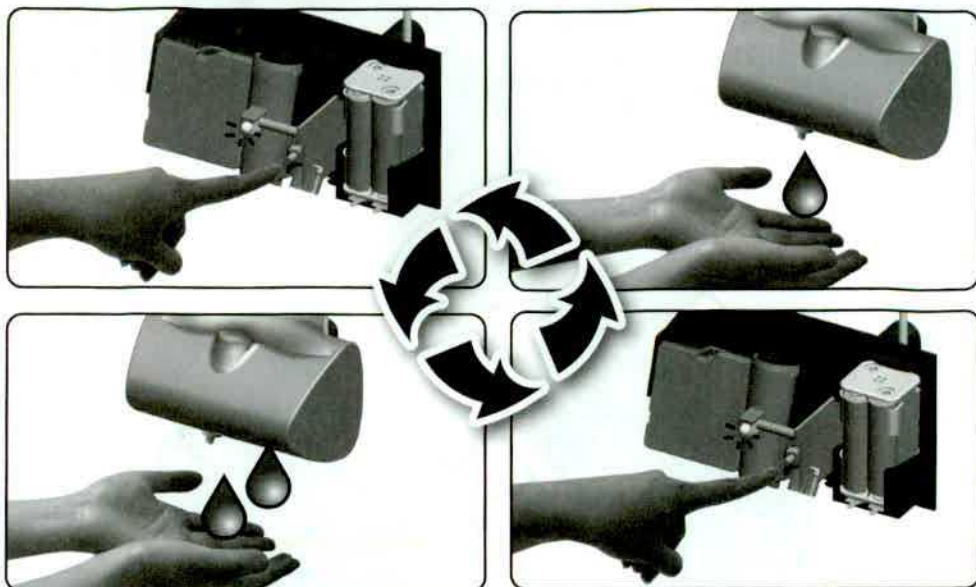

After inserting batteries and before use the diode must blink 4 times.

In case of continuous blinking batteries must be checked.

Drill Guide

